



PICK THE MERRILL IOWA STALL TO FIT YOUR NEEDS


- Proper installation reduces chance of rear leg & hip injury & maximizes cow udder protection
- Hip is under stall – puts udder in center of stall
- Control rail should be 6"-8" in front of curb center
- Allows room for cow to turn & step across gutter

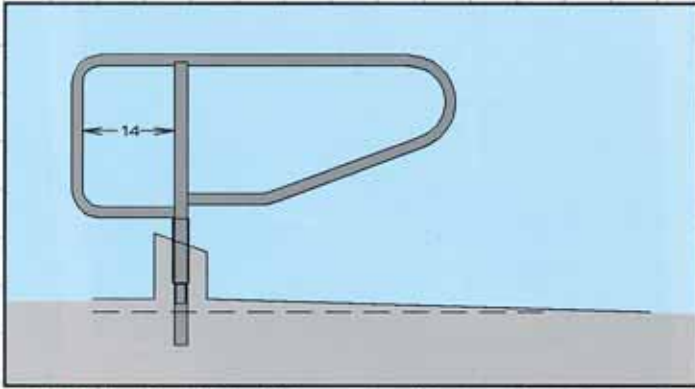


80-20 Standard Stall for use with waterbowl

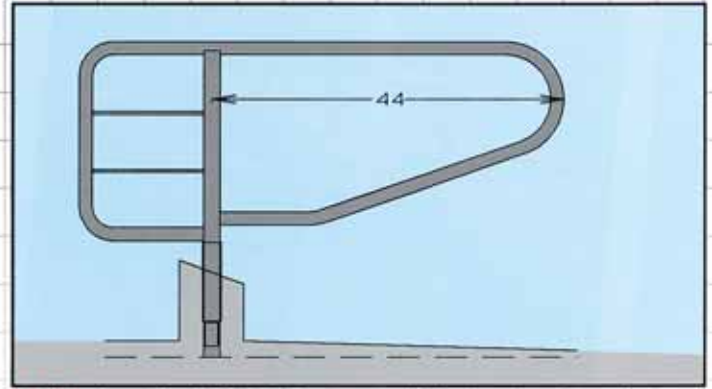


80-21 Standard Stall for use without waterbowl

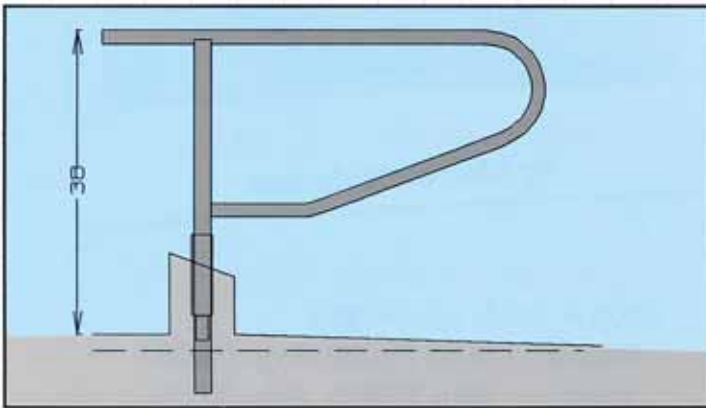


80-22 Use as wall end or alley end

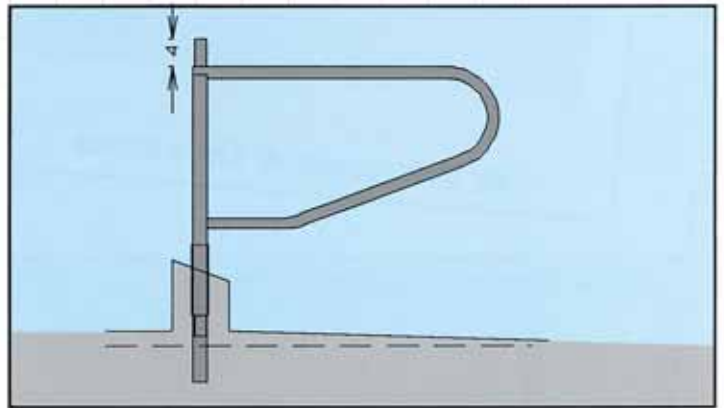


80-23 Use as end stall on crosswalk or end row where feed cart turns

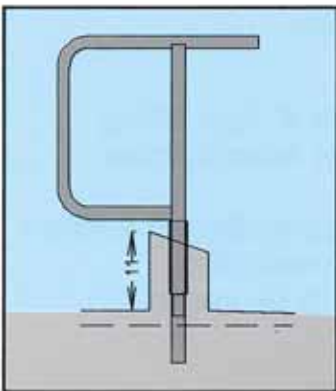


80-24 Use w/waterbowl

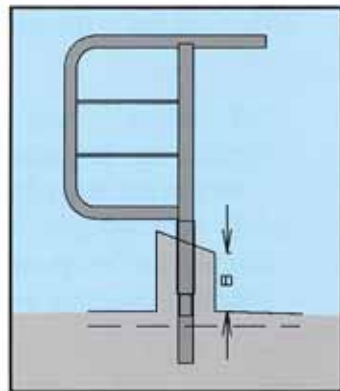

80-25 Use w/out waterbowl

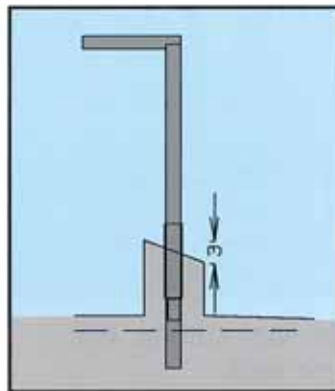

80-26 Use as wall end

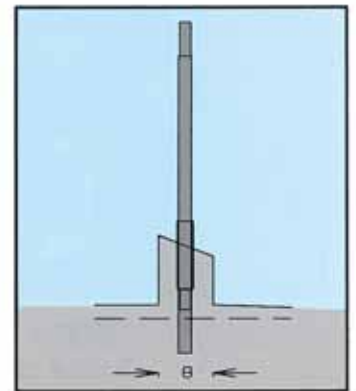

80-27 Use as end post where feed cart turns & paneling exists to keep cows away from cross walk

Use as standard stall add-on extension where post/column exist; insert tube/shaft to reach post/column